

CONFIO<sup>®</sup>  
**FAN LIGHT CONTROLLER**  
CTFLZB

# INTRODUCTION

---

The Fan and Light Controller is a Miniature Micro Module that is remotely controlled and designed to operate in AC mains. This Device enables 3-step Fan Speed Control and ON/OFF Control of one Light. The Fan speed is controlled by the Mobile app or Rotatory Step Switch.

The 4-Channel Relay can be used in one of four operating modes:

- **4-Channel Relay Controller** - Controls up to 4 Relay- Controlled Devices.
- **Dual-Channel Curtain Controller** - Controls up to 2 Dual Channel Curtains or Blinds.
- **Single-Channel Curtain Controller** - Controls a Single High- Wattage Curtains.
- **Fan-Light Controller** - Controls a Three-Speed Fan and Light.

**Note:** Fan Capacitor Module "CTFCZB" is sold separately.

# TECHNICAL SPECIFICATION

Power Input	240VAC, 50Hz
Operating Temperature	-10 to +55 °C
Relative Humidity	5% - 95%RH
Dimensions	49mm x 49mm x 18mm
RF Frequency	2.4 GHz
Power Consumption	<1watt
Surge Protection	1.2 kv
Typical Line of Sight Range	Up to 10m indoor / 10-20m outdoor
Plastic Housing	Fire retardant ABS
Supported Load Types	Fan, LED Lights

# POWER RATINGS

---

Load Type	Single Channel
Incandescent	400W
MLV	200W
LED	100W
Inductive	150W

## QR CODE

---

This document includes usage details for the Fan Controller Module. Please refer to the following documents for details on additional operating modes.

Please SCAN the QR code below for the 4-Channel Relay Controller Manual.



Please SCAN the QR code below for the Dual Channel Curtain Controller Module.



Please SCAN the QR code below for the Single Channel Curtain Controller Module.



Please SCAN the QR code below for the Fan-Light Controller Module.



# WARNINGS & CONSIDERATIONS

---



## WARNING!

Turn OFF electrical power before installing or servicing this product. Improper use or installation can cause **SERIOUS INJURY, DEATH, or LOSS/DAMAGE OF PROPERTY.**

---



## WARNING!

This Device must be protected by a Circuit Breaker (20A max).

---



## WARNING!

Ground this Device in accordance with the National Electric Code (NEC) requirements. **DO NOT** rely solely upon the yoke plate's contact with a metal wall box for adequate grounding. Use the Device's ground wire to make a secure connection to the safety ground of the Electrical System.

---



## IMPORTANT!

This Device must be installed by a licensed Electrician in accordance with all national and local electrical codes.

---



## IMPORTANT!

If you are unsure about any part of these instructions, consult a qualified Electrician.

---



## IMPORTANT!

Use this Device only with copper or copper-clad wire. Do not use aluminum wiring. This product has not been approved for use with aluminum wiring.



### IMPORTANT!

This product generates heat during normal operation.

---




### IMPORTANT!

Using this product in a manner other than outlined in this document voids your warranty. Further, Confio is NOT liable for any damage incurred with the misuse of this product.

## SAFETY MEASURES

1. Before installation, make sure that the power supply mains is turned off.
2. If multiple loads are connected to a single terminal, use appropriate connectors to avoid short circuit.
3. Use only a minimum of 1.5 sqmm wire and a maximum of 2.5 sqmm wires for connections..
4. This Device requires a Neutral connection to operate.

## ID BUTTON LOCATION ON THE DEVICE

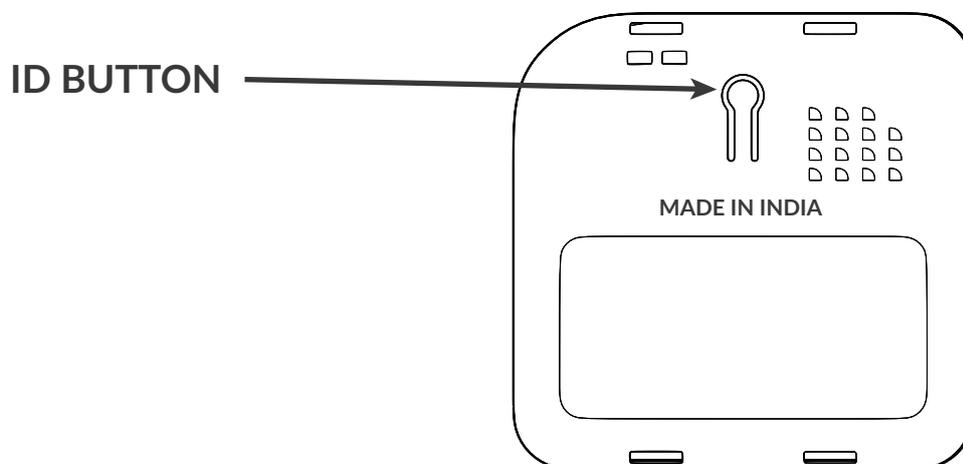

# CHANGING MODES

By default, the Device is configured to operate as a 4 Channel Relay. The operating mode can be changed using one of two methods:

1. **ID Button** press sequence as referred to in the table, this must be done before adding the device to the Zigbee Network.
2. **Change Mode** function is available in the Confio Puck Driver's Actions Tab. This function will allow you to choose one of the four Operation Modes. After changing modes once, the mode cannot be changed again unless the Device is removed from the Zigbee Network and reset to defaults

Please refer to the Control4 Confio Puck Driver documentation for additional details.

**Note: If mode selected in Puck Device before including to Mesh Network is not equal to mode selected in the driver. The pre-configured parameters and mode in Driver will configure to Puck Device once included in Mesh.**


# ID BUTTON FUNCTIONS & LED INDICATION

Operation	ID Button Presses	Function/Mode	LED Indications	Notes
Normal Operation	4	Joining to Zigbee Network (Started Identify process)	Both LEDs toggle on every 1 second	The Joining process will take 15 seconds
	9	Factory Reset	Both LEDs keep glowing until the factory reset completes	Parameters will be set to default state
	13	Leave Network & Reset	Red LED Toggle on every 1 second	
	15	Restart		Device power cycle
	5	Device Mode Selection	Both LEDs toggle on every 500 milli seconds	Refer below Note 1
Device Mode Selection	1	To select 4-Channel Relay Mode	Red LED toggle on every 1 second until the Device joins to ZigBee Network	Refer 4 Channel Relay Controller Manual for more details
	2	To select Dual Curtain Controller Mode	Red LED toggle on every 2 seconds until the Device joins to ZigBee Network	Refer Dual Curtain Controller Manual for more details
	3	To select Single Curtain Controller Mode	Red LED toggle on every 3 seconds until the Device joins to ZigBee Network	
	4	To select Fan Controller Mode	Red LED toggle on every 4 seconds until the Device joins to ZigBee Network	Refer Fan Controller Manual for more details


**Note:**

1. If no Device Mode is selected within 30 seconds the Device will return to the previous application mode.
2. All settings will be reset to their factory defaults after the Device is left from Zigbee Network by the ID Button.
3. If the Device is joined to Zigbee Network Green LED toggle on every 500 milliseconds.

## DEVICE DIMENSIONS

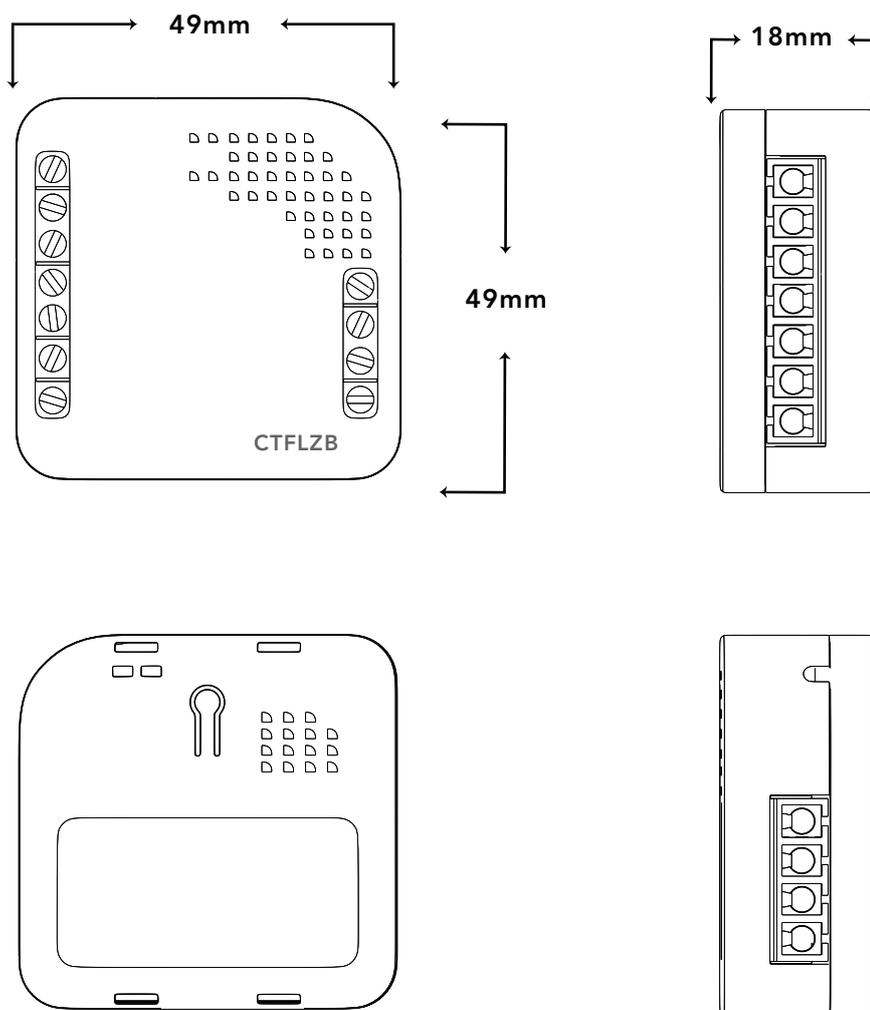

# INTERNAL BLOCK DIAGRAM

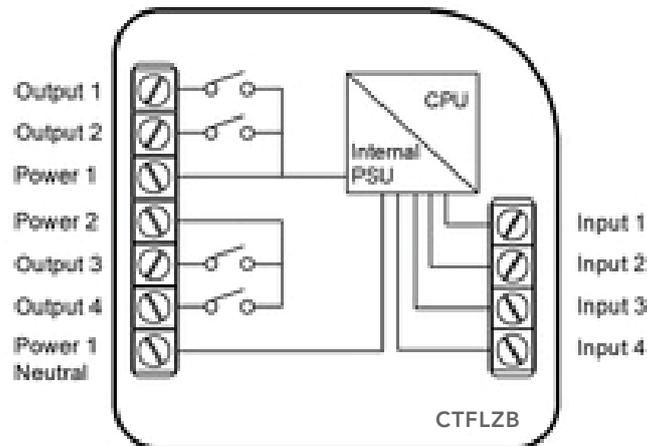

Note: As indicated Power 2 is not tied to the Neutral or input terminals, care must be taken if power is sourced from a different "Circuit Breaker" to alleviate tripping

# CONFIGURATIONS

Function	Node _SW	Aux. Contact 1 (SW_1)	Aux. Contact 1 & 2 SW_1 & SW_2)
Identify	<b>4</b>	<b>4</b>	<b>N/A</b>
Zigbee Channel	<b>7</b>	<b>7</b>	<b>N/A</b>
Reboot Device	<b>15</b>	<b>15</b>	<b>N/A</b>
Factory reset	<b>9</b>	<b>22</b>	<b>9-4-9</b>
Leave Mesh & Reset	<b>13</b>	<b>30</b>	<b>13-4-13</b>

**Identify** - Join the Device to the Zigbee Network.

**Zigbee Channel** - Device's current Zigbee channel is identified as the number of times LEDs blink.


**Reboot Device** - The Device will be rebooted, and the relays will return to their previous state.

**Factory Reset** - All Device application parameters will be reset to the factory defaults, except Zigbee Network parameters. The Device will remain connected to the Zigbee Network.

**Leave Mesh and Reset** - All Device parameters will be reset to the factory defaults including Zigbee Network parameters. The Device will be removed from the Zigbee Network.

**Note:** If the Device is disconnected from Confio Puck Driver, Parameters and mode in the Device won't change.

## BUTTON BEHAVIOUR

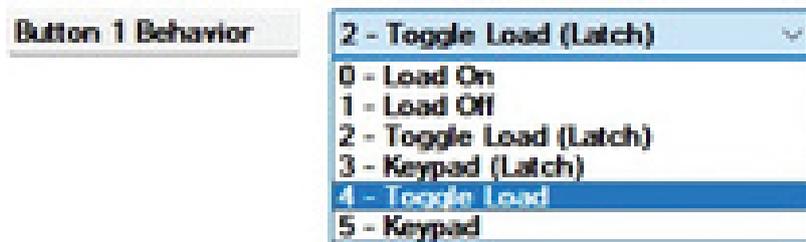

**Load On** – When the switch detects voltage, the corresponding Load turns on

**Load Off** – When the switch detects voltage, the corresponding Load turns off

**Toggle Load** – When the switch detects voltage, the corresponding Load turns on; when the switch is turned off, the Load is turned off

**Keypad** – Adds a keypad connected to the driver that will be triggered when the switch detects the voltage. **Toggle load (Latch)** – When the switch detects voltage the corresponding load is toggled

**Keypad (Latch)** – When the switch detects voltage, the keypad connection is triggered; when the switch is turned off, the keypad is turned off


# FAN SWITCH TYPE CONFIGURATION

Fan Switch Type can be configured using Device Configuration in Confio Puck Driver's properties

## Device Configuration




## OPTION 1: ROTARY SWITCH

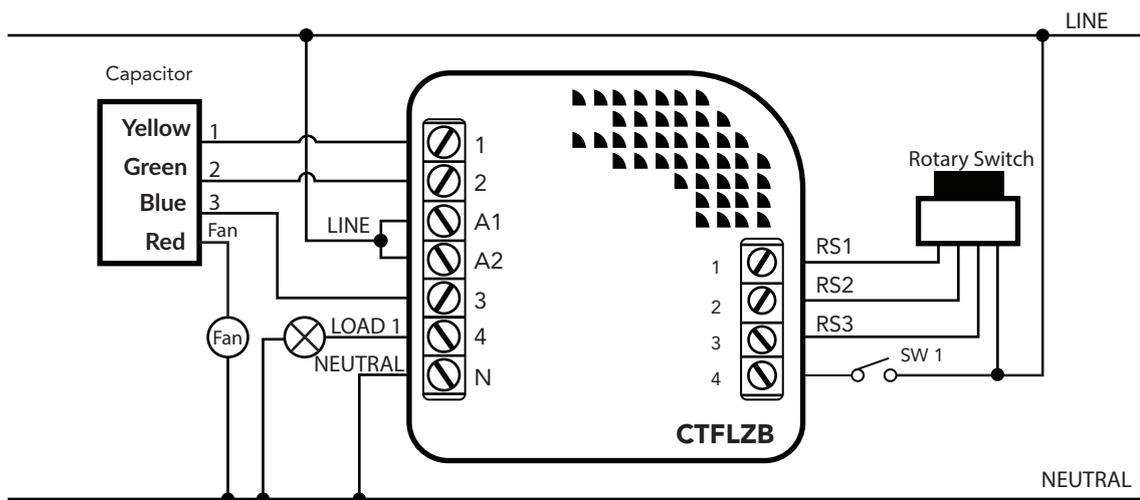

In Rotary Switch Mode Fan levels will change according to level set in Rotary Switch SW2 is directly controls/triggers the Load1

**Note:** Fan Capacitor Module "CTFCZB" is sold separately.

# OPTION 2: SINGLE SWITCH

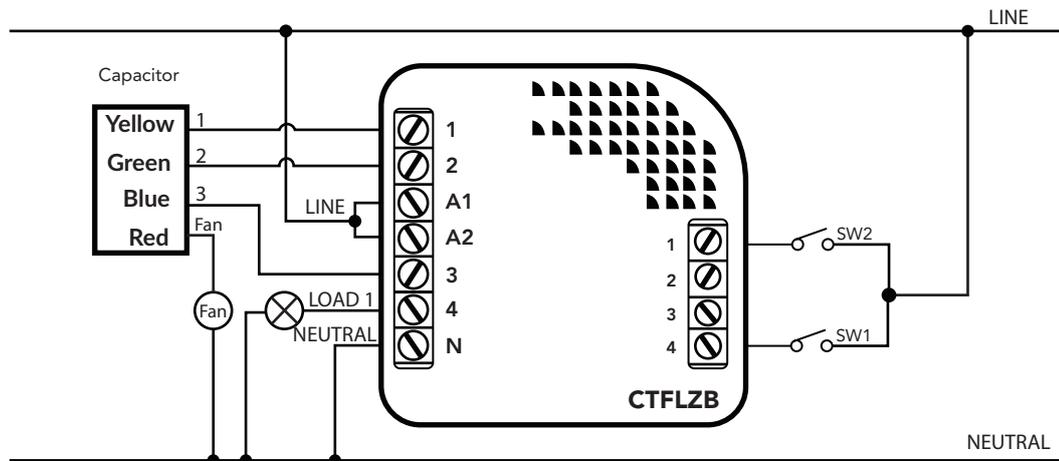

In Single Switch Mode, SW2 will toggle Fan level between Level 0 and previous Level. If previous level is Level 0 then Switch will toggle Fan level between Level 0 and Level 1. Fan levels changing can be done from App or Driver. SW1 directly controls/triggers the Load1.

**Note: Fan Capacitor Module "CTFCZB" is sold separately**

## IMPORTANT INSTRUCTIONS

- Wear standard personal protection equipment to give protection to the installer.
- Position the antenna far away from metal elements to avoid interference.
- Do not cut or shorten the antenna, as its length matches the band in which the system operates.
- Do not over-tighten the terminal block. It can cause serious malfunction after installation.

# TROUBLE SHOOTING

1. If the load does not turn ON/OFF:
  - Ensure that the circuit breaker is not turned off or tripped. Ensure that the load is not burned out and is screwed in properly.
  - Ensure that the Device is in working condition. (Red/Green LED blinks)
  - Check for proper wiring (see "Wiring Diagrams").
2. If the Switches connected to the input contacts do not operate the load, check for proper wiring (see "Wiring Diagrams").
3. If the device is not identified to the Zigbee Network: Confirm that the Control4 Controller and the Device are within the 10m distance while adding to the Zigbee Network

**Note: Triggering Relay 1 will also trigger Relay 2, 3, and 4. Relays 2, 3, and 4 cannot be triggered independently.**

## RECOMMENDATIONS

For connecting multiple Loads on a single Device, ask the Electrician to calculate the total load and confirm that it does not exceed the ratings mentioned under the Technical Specification section.

- When outputs are muxed and connected to an AC or a Geyser, appropriate switches automatically get disabled.
- Check the space behind the Switch Box for placing the Device.
- Turn off the MCB before the installation of Puck Module.
- Use only minimum 1.5sqmm wires and maximum 2.5sqmm wires for connections.
- Strictly follow the wiring diagram for connections.
- Do not connect higher loads(more than 8A) to single channel.
- Make sure parameters and configurations for muxing are set before connecting higher loads.
- If there are signs of water seeping into the Switch Box, disconnect the power supply to avoid short circuits.

# WARRANTY

---

A Standard warranty of 24 months from the date of supply is applicable for all products

**The warranty shall not cover:**

- Mechanical damages caused by impact, falling or dropping the device or their object, unauthorized use or not observing the Operation Manual.
- Damages resulting from external causes, for example, flood, storm, fire, lightning, natural disasters.
- Damages resulting from surges in the power and/or telecommunication network, improper connection to the grid in a manner inconsistent with the operating manual, or from connecting other Devices not recommended by the Manufacturer.
- Damages resulting from the use of spurious spare parts or accessories improper for given model, repairing and introducing alterations by unauthorized persons.
- Defects caused by operating inoperable devices or accessories.

# MEDHA

*By Confio*

For any technical and support queries,  
please contact the Manufacturer

CONFIO TECHNOLOGIES PRIVATE LIMITED  
#3500/A, 80 Feet Road,  
Raghuvanahalli, Bangalore - 560062  
Karnataka, India

Email: [support@confiolabs.com](mailto:support@confiolabs.com)  
[www.confiolabs.com](http://www.confiolabs.com)